




INSTALLATION INSTRUCTIONS COMMERCIAL WASHER

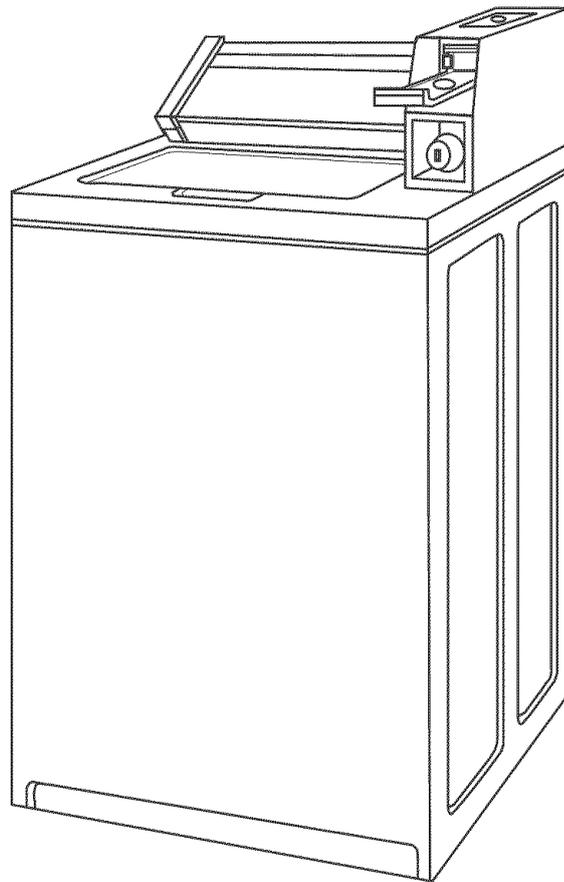

Write down the model and serial numbers before installing washer.

Both numbers are listed on the model/serial rating plate located under the lid.

Model # _____

Serial # _____

Date of Purchase _____



8575077

Table of Contents

WASHER SAFETY	2
INSTALLATION REQUIREMENTS	3
Tools and Parts	3
Location Requirements.....	3
Drain System.....	4
Electrical Requirements	5
INSTALLATION INSTRUCTIONS	6
Before You Start	6
Remove Shipping Strap	6
Connect the Hoses.....	6
Level the Washer	7
Install Coin Slide and Coin Box.....	8
Complete Installation	8
Adjust Timer Clutch	9
Changing Vend Price (for Coin Slide Mechanism Provided with Washer)	9
Additional Features.....	10

WASHER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable, or explosive substances as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable, or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.
- Before the washer is removed from service or discarded, remove the door or lid.
- Do not reach into the washer if the drum, tub or agitator is moving.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- See "Electrical Requirements" for grounding instructions.

SAVE THESE INSTRUCTIONS

INSTALLATION REQUIREMENTS

Tools and Parts

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

Tools needed

- Level
- Utility knife
- Scissors
- 8" or 10" adjustable wrench
- Flat-blade screwdriver
- Pliers
- Bucket

Parts supplied

Remove parts bag from washer. Check that all parts were included.

- 1 hose clamp
- 2 inlet hoses
- 4 flat water hose washers
- 2 front-leveling legs with nuts
- 1 drain hose

Location Requirements

IMPORTANT: Do not install or store the washer where it will be exposed to the weather.

Proper installation is your responsibility.

You will need:

- A water heater set to deliver 120°F (49°C) water to the washer.
- A grounded electrical outlet located within 4 ft (1.2 m) of where the power cord is attached to the back of the washer. See "Electrical Requirements."
- Hot and cold water faucets located within 4 ft (1.2 m) of the hot and cold water fill valves, and water pressure of 10-100 psi (69-690 kPa).
- A level floor with a maximum slope of 1" (2.5 cm) under entire washer.
- A sturdy floor to support the washer weight (washer, water and load) of 315 lbs (143 kgs).
- A 12" (30 cm) minimum riser to provide an air cushion and prevent noise and damage to valves for a single washer installation.

Do not store or operate the washer in temperatures at or below 32°F (0°C). Some water can remain in the washer and can cause damage in low temperatures.


Recessed Area and Closet Installation Instructions

This washer may be installed in a recessed area or closet.

The installation spacing is in inches and is the minimum allowable. Additional spacing should be considered for ease of installation, servicing, and compliance with local codes and ordinances.

If closet door is installed, the minimum unobstructed air opening in the top and bottom is required. Louvered doors with equivalent air openings are acceptable.


Minimum Installation Clearances

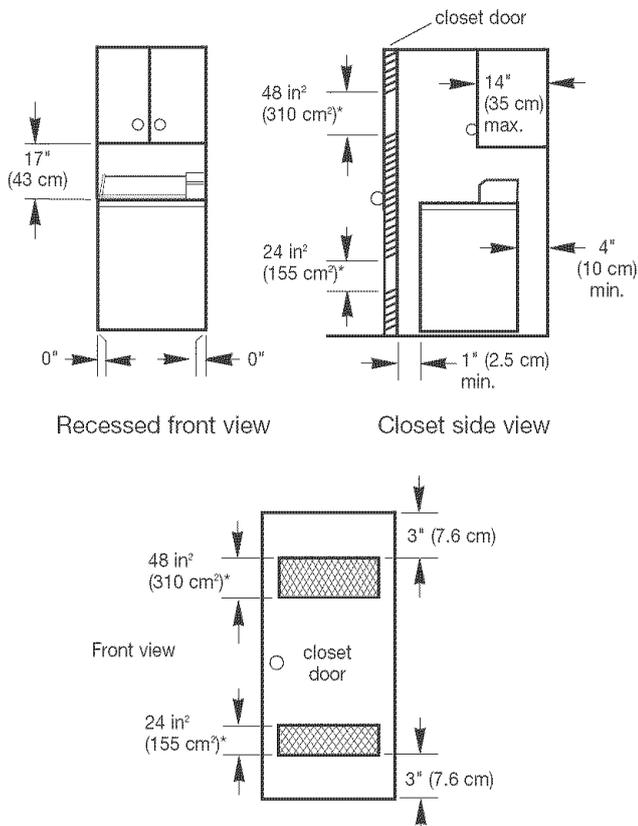

*Opening is the minimum for a closet door.
Louvered doors with equivalent air openings are acceptable.

- Additional spacing should be considered for the ease of installation and servicing.
- Additional clearances may be required for wall, door and floor moldings.
- Additional spacing of 1" (2.5 cm) on all sides of the washer is recommended to reduce noise transfer.
- Companion spacing should also be considered.

Product Dimensions

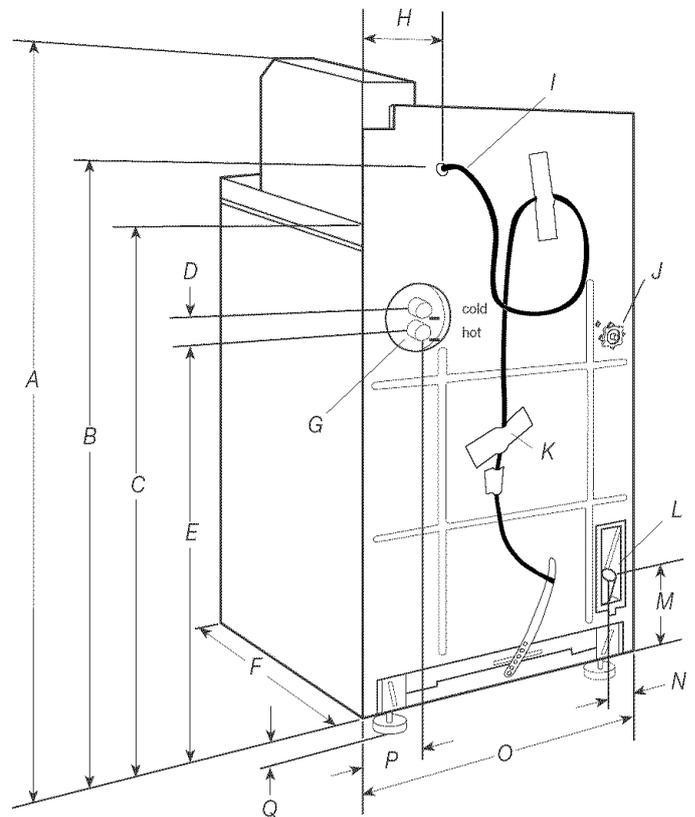

- A. 43" (109 cm)
- B. 38 1/8" (97 cm)
- C. 35" (89 cm)
- D. 1 1/2" (4 cm)
- E. 27 3/4" (70.5 cm)
- F. 25 1/2" (65 cm)
- G. Water inlets
- H. 7" (18 cm)
- I. Power supply cord
- J. Water level switch and shaft
- K. Label
- L. Drain hose connector
- M. 7" (18 cm)
- N. 5" (12.7 cm)
- O. 27" (68.5 cm)
- P. 5 1/4" (13.3 cm)
- Q. 1" (2.5 cm)

Drain System

Standpipe Drain System

The standpipe drain requires a minimum diameter standpipe of 2" (5 cm). The minimum carry-away capacity can be no less than 17 gal. (64 L) per minute.

The top of the standpipe must be at least 39" (99 cm) high and no higher than 96" (243.8 cm) from the bottom of the washer.

Electrical Requirements

⚠ WARNING



Electrical Shock Hazard

- Plug into a grounded 3 prong outlet.**
- Do not remove ground prong.**
- Do not use an adapter.**
- Do not use an extension cord.**
- Failure to follow these instructions can result in death, fire, or electrical shock.**

IMPORTANT: The washer must be electrically grounded in accordance with local codes and ordinances or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, latest edition.

- If codes permit and a separate ground wire is used, it is recommended that a qualified electrical installer determine that the ground path is adequate.
- Do not ground to a gas pipe.
- Do not have a fuse in the neutral or ground circuit.

A copy of the above code standards can be obtained from:

National Fire Protection Association
One Batterymarch Park, Quincy, MA 02269

- A 120-volt, 60-Hz, AC-only, 15- or 20-amp, fused electrical circuit is required. A time-delay fuse or circuit breaker is also recommended. It is recommended that a separate circuit serving only this washer be provided.
- The washer is equipped with a power supply cord having a 3 prong grounding plug.
- To minimize possible shock hazard, the cord must be plugged into a mating, 3 prong, grounded-type outlet, grounded in accordance with local codes and ordinances. If a mating outlet is not available, it is the personal responsibility and obligation of the customer to have the properly grounded outlet installed by a qualified electrician.

Recommended Ground Method

The washer, when installed, must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, latest edition, and all local codes and ordinances.

GROUNDING INSTRUCTIONS

For a grounded, cord-connected washer:

This washer must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electrical shock by providing a path of least resistance for electric current. This washer is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

For a permanently connected washer:

This washer must be connected to a grounded metal, permanent wiring system, or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

INSTALLATION INSTRUCTIONS

Before You Start

⚠ WARNING


Excessive Weight Hazard

**Use two or more people to move and install washer.
Failure to do so can result in back or other injury.**


NOTE: To prevent floor damage, set the washer onto cardboard before moving across floor.

Remove Shipping Strap

1. Remove tape that covers shipping strap. Pull to completely remove the shipping strap with 2 cotter pins from the inside of the washer.

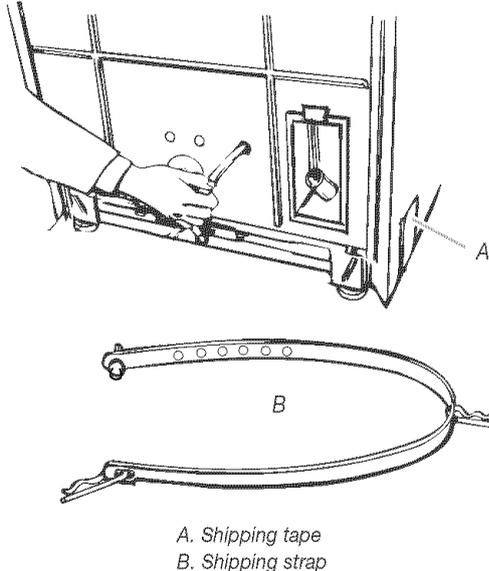

2. Pull firmly to remove the end of shipping strap from the back of the washer. The shipping strap plug must be completely removed from the washer for the self-leveling legs to be released.

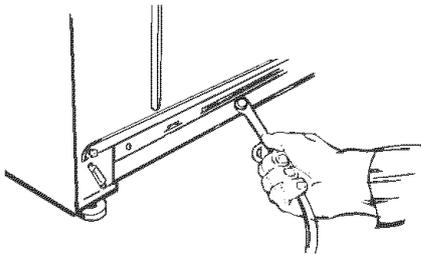


Save the shipping strap for later use.

Connect the Hoses


- Use new hoses and washers that came with your washer.
- Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Inspect and replace inlet hoses if bulges, kinks, cuts, wear, or leaks are found. When replacing your inlet hoses, mark the date of replacement on the label with a permanent marker.

Connect the inlet hoses to the washer

1. Insert a flat washer into each end of the inlet hoses. Check that washers are firmly seated in couplings.

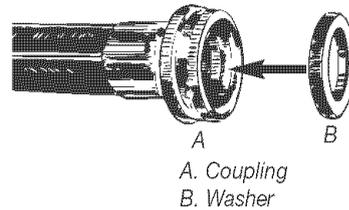

2. Attach a hose to the hot water inlet valve. Tighten the coupling by hand.

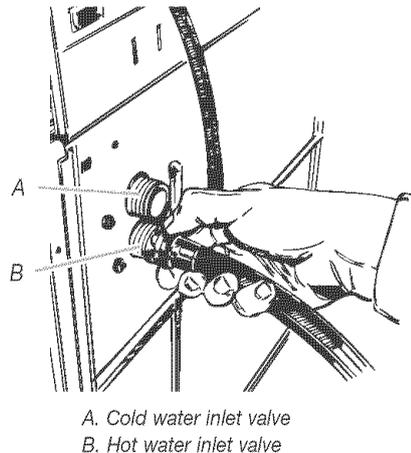

3. Attach the other hose to cold water inlet valve. Tighten the coupling by hand.
4. Use pliers to make an additional two-thirds turn.


NOTE: Inlets valve threads are plastic. Do not strip or cross-thread.

Connect the drain hose


1. Put "hook" end of drain hose into standpipe.
2. Estimate the length of drain hose needed when washer is in final position. Hose must be cut exactly to length so "hook" end is held tightly over edge of standpipe.

If drain hose is too long, cut straight end of hose. (Do not cut the "hook" shaped end of the drain hose.)


NOTE: Do not force excess length of drain hose down the standpipe. This could cause siphoning.

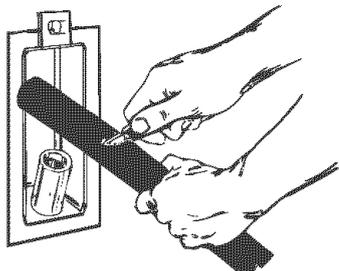

3. Place the hose clamp over the washer drain connector. Push the drain hose onto the washer connector. Use pliers to open clamp and slide clamp over drain hose. Check for good fit.

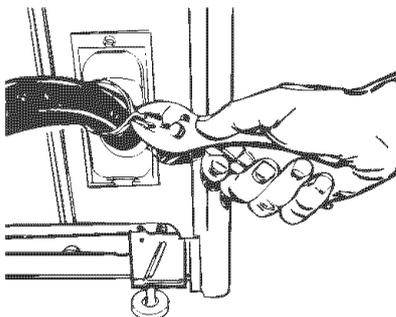


4. Measure and mark a point approximately 16 inches (40.6 cm) from the plug end of the shipping strap. Cut the shipping strap at this point.

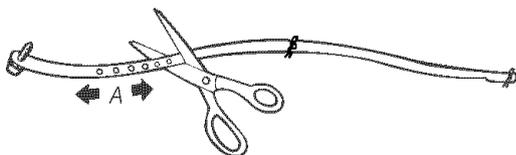

A. 16" (40.6 cm)

5. Check that hose is not twisted or kinked and is securely in place. With the "hook" end of drain hose in the standpipe, tightly wrap the shipping strap around the standpipe. Push plug into the tightest hole in the shipping strap.

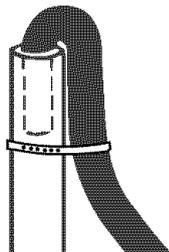

Connect the inlet hoses to the water faucets

1. Before attaching water inlet hoses to the water faucets, run water through both faucets into a bucket. This will get rid of particles in water lines that might clog hoses. Mark which is the hot water faucet.
2. Attach bottom hose (inlet marked "H") to hot water faucet. Tighten coupling to faucet by hand.
3. Attach top hose (inlet marked "C") to cold water faucet. Tighten coupling to faucet by hand.
4. Use pliers to make an additional two-thirds turn.


Level the Washer

Install the front leveling feet

1. Stack two corner posts on top of each other. Tilt washer backward and insert corner posts 3 inches (7.6 cm) in from one side of washer as shown. Repeat with other corner posts on other side of washer.




2. Use the leveling legs and nuts from parts package. Screw nut down to within 1/2" (1.3 cm) of base.

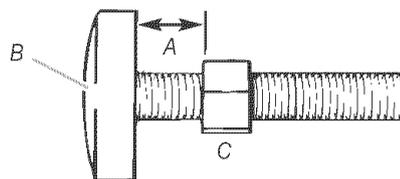

A. 1/2" (1.3 cm)
B. Base
C. Nut


3. Insert legs into correct holes at each front corner of washer until nuts touch washer. Do not tighten nuts until the washer is leveled.

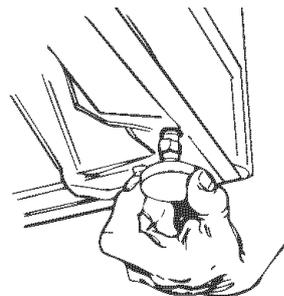


4. Tilt washer backward and remove corner posts. Gently lower washer to floor.
5. Move washer to its permanent location. Remove cardboard or hardboard from under washer.

Level the washer

1. Tilt washer forward raising back legs 1" (2.5 cm) off of floor. To adjust rear self-leveling legs, gently lower washer to floor.
2. Check levelness of the washer by placing a carpenter's level on top of the washer, first side to side; then front to back.

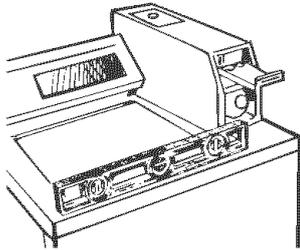

3. If washer is not level, adjust the front legs up or down. Make final check with level.
4. When washer is level, use a wrench to turn the nuts on front legs up tightly against washer base. If nuts are not tight against washer base, the washer may vibrate.

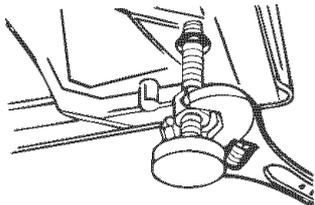


Install Coin Slide and Coin Box

If the coin slide mechanism has already been installed, skip to "Complete Installation".

1. Remove the service door of the meter case by lifting it up at the back. Install the money accepting device. Refer to the manufacturer's instructions for proper installation. For washers using coin slides, use the adapter kit supplied with the washer.
2. Replace the meter case service door. Make sure the lock is located toward the rear of the case.

Adjusting Coin Box

The tight fit of the coin box is set at the factory. You can loosen the fit as desired by loosening the slotted rods inside the front of the coin box.

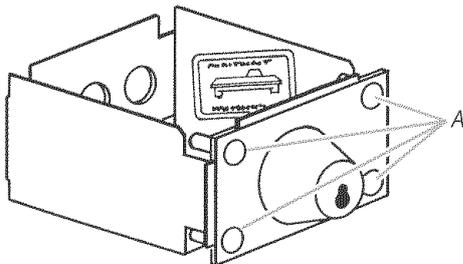

A. Slotted rods

NOTE: Keep a record of all coin box key numbers. A lost key can only be replaced if ordered by key number from Sears Parts. The key number is located both on the key and behind the end panel of the coin box. If the key number is not available, the lock must be drilled out to remove the coin box.

Complete Installation

1. Check the electrical requirements. Be sure that you have the correct electrical supply and the recommended grounding method. See "Electrical Requirements."
2. Check to be sure all parts are now installed. If there is an extra part, go back through the steps to see which step was skipped.
3. Check to be sure you have all of your tools.
4. Check to be sure that the yellow shipping strap was completely removed from the lower back of the washer.
5. Dispose of or recycle all packaging materials.
6. Check to be sure the water faucets are on.
7. Check for leaks around faucets and inlet hoses.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

8. Plug into a grounded 3 prong outlet.

Making a cycle check

1. Run the washer through 1 complete cycle.
2. Measure $\frac{1}{2}$ of the normal recommended amount of powdered or liquid detergent and pour it into the washer basket.
3. Close the lid.
4. When the cycle is complete, check all hoses and connections for proper operation and that they do not leak.

Adjusting Timer Clutch

All coin operated models have a timer that provides a 9½-minute wash in the NORMAL Cycle. To check the cycle, push the coin slide all the way in and pull all the way out. Note the wash cycle time. If the washer does not start or does not provide the proper wash time, the clutch assembly may need adjustment.

⚠ WARNING




Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

NOTE: The washer was tested at the factory. Some time may have been left so that the washer will start to operate before the coin slide is operated. If this happens, take off the access panel from the top of the meter case and set the clutch to OFF position by hand. Then proceed with timer clutch check.

To adjust the clutch:

1. Unplug washer or disconnect power.
2. Remove the meter case access panel.
3. The clutch assembly has a timer clutch adjustment screw. If the washer does not start after the coin slide has been pushed all the way in and out, turn the clutch adjustment screw clockwise (right).
4. If the timer goes past the third increment of fill, less than 9½-minutes of wash will be provided in the NORMAL Cycle. Turn the clutch adjustment screw counterclockwise (left).

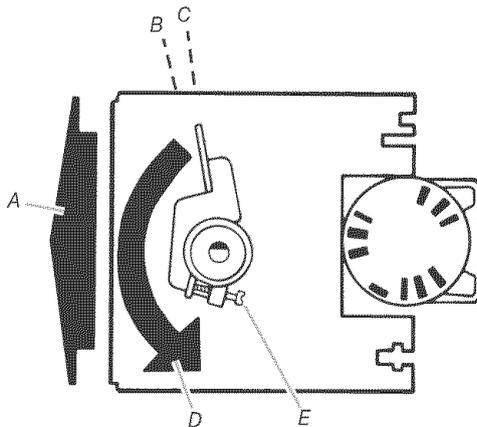

- A. Timer front
- B. On
- C. Off
- D. Rotate counterclockwise
- E. Timer clutch adjustment screw

Changing Vend Price (for Coin Slide Mechanism Provided with Washer)

NOTE: For any other type of money-accepting device, please see the manufacturer's instructions to change vend price.

⚠ WARNING




Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

1. Unplug washer or disconnect power.


NOTE: Place all screws and other items removed from coin slide assembly on a cloth so they will not get lost.

2. Remove service door from meter case.
3. Remove chute bolt from slide mechanism and remove slide mechanism from meter case.

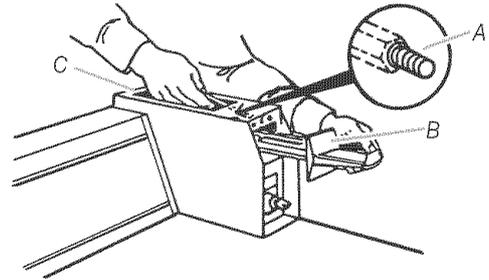

- A. Chute bolt
- B. Coin slide mechanism
- C. Access

4. Unhook and remove slide return spring.
5. Place coin(s) in coin slot(s) and push forward all the way. Remove 2 screws securing buffer and detach buffer.

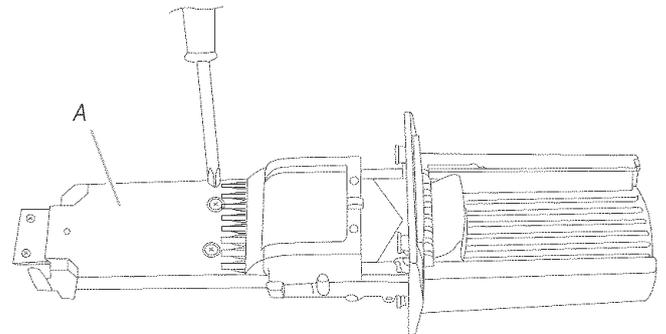

- A. Buffer

6. Turn coin chute upside down and set new vend price by adding or removing the appropriate block-out keys and/or dime inserts according to the following Table of Vend Prices.

TABLE OF VEND PRICES

VEND PRICE	COIN SLOTS							
	1	2	3	4	5	6	7	8
0	█	█	█	█	█	█	█	█
10¢	□	█	█	█	█	█	█	█
25¢	█	█	█	█	█	█	█	█
35¢	□	█	█	█	█	█	█	█
50¢	█	█	█	█	█	█	█	█
60¢	□	█	█	█	█	█	█	█
75¢	█	█	█	█	█	█	█	█
85¢	□	█	█	█	█	█	█	█
\$1.00	█	█	█	█	█	█	█	█
\$1.10	□	█	█	█	█	█	█	█
\$1.25	█	█	█	█	█	█	█	█
\$1.35	□	█	█	█	█	█	█	█
\$1.50	█	█	█	█	█	█	█	█
\$1.60	□	█	█	█	█	█	█	█
\$1.75	█	█	█	█	█	█	█	█
\$1.85	□	█	█	█	█	█	█	█
\$2.00	█	█	█	█	█	█	█	█

NOTES:

- █ Black slots are closed off by block-out key. To remove block-out keys, pull straight up.
 - █ Be sure block-out keys and/or dime inserts are seated properly and ratchet dog is in place with its spring connected. Be sure the proper coin sizing block is in place.
Part # 20-3007 for up to 7 quarters and 1 dime
Part # 20-3006 for up to 8 quarters and 0 dimes
 - █ Unless otherwise ordered, all coin chutes are supplied with Part # 20-3006 in place.
7. Reassemble buffer to bottom of coin slide and secure with 2 screws.
 8. Pull slide back to original position and reattach slide return spring.
 9. Reinstall slide mechanism into meter case, replace chute bolt.
 10. Replace service door.
 11. Plug in washer or reconnect power.

NOTE: Refer to the product information sheet provided with the coin box for additional information

Additional Features

⚠ WARNING



Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

Checklist for washer operation:

- Check the following if the washer is not operating properly:
1. Power supply cord is plugged in.
 2. Circuit breaker is not tripped or fuse is not blown.
 3. Timer has been advanced to start of a cycle.
 4. Water faucets are turned on.
 5. Inlet and drain hoses are not kinked.
 6. Washer lid is closed.
 7. Inlet valve is frozen if not protected from the weather.
 8. Suds level. Excess suds will slow the spin and cause poor rinsing. Operate the washer through a complete cycle with no detergent. Use less detergent or a controlled suds type detergent in future loads.

If you need assistance:

For Sears warranty information or to contact a Sears Service Center, call **1-800-4-MY-HOME® (1-800-469-4663)**.

If you need SERVICE or PARTS for your Kenmore coin-operated washer:

When requesting service, be ready to give the model number, serial number (located on a plate under the lid) and date of purchase. Record on front cover.

Typical full load sizes

Load type	Loading suggestion
Mixed Load	3 double sheets
	4 pillowcases
	6 pair shorts
	8 T-shirts
	2 shirts
	2 blouses
	8 handkerchiefs
	Permanent Press
1 tablecloth	
1 dress	
1 blouse	
2 slacks	
3 shirts	
2 pillowcases	
Heavy Work Clothes	
	3 shirts
	1 coverall
	4 pair of jeans
	1 overall
Knits	3 blouses
	4 slacks
	6 shirts
	4 tops
	4 dresses

Operating tips

WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

It is recommended that fiberglass items not be washed in coin-operated washers. If these items are washed in the washer, run the washer through a complete cycle to rinse any residue away that might be left in the washer.

SEARS COMMERCIAL WASHER WARRANTY

Model 26152 Limited 2-Year Warranty on Mechanical and Electrical Parts

For two years from the date of purchase, when the washer is installed and operated in accordance with the instructions in the Installation Instructions, Sears will furnish replacement parts for all defective mechanical or electrical parts, including coin box and chute assemblies. You will be charged for labor.

Warranty Service

Warranty service is available by contacting the nearest Sears Service Center in the United States.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Use the space below to record the model number, serial number and purchase date of your new Sears Commercial washer.

Model number _____

Serial number _____

Date of Purchase _____

NOTE: Keep this warranty and your Sears salescheck (receipt) for future reference.

**Sears, Roebuck and Co., Dept. 817WA,
Hoffman Estates, IL 60179**

For Sears warranty information or to contact a Sears Service Center, call 1-800-4-MY-HOME® (1-800-469-4663).

Get it fixed, at your home or ours!

Your Home

For repair—in your home—of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest **Sears Parts & Repair Center.**

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM
(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}
(1-800-533-6937)
www.sears.ca



® Registered Trademark / TM Trademark / SM Service Mark of Sears, Roebuck and Co., used under licensee by Sears Canada.

® Marca Registrada / TM Marca de comercio / SM Marca de Servicio de Sears, Roebuck and Co., usada bajo licencia de Sears Canada.

® Marque déposée / TM Marque de commerce / SM Marque de service de Sears, Roebuck and Co., en vertu d'un porteur de licence par Sears Canada.